

The word "SONOS" is rendered in a large, stylized font where each letter is filled with intricate, purple fractal patterns. The patterns consist of various geometric shapes like spirals, circles, and lines, creating a complex, organic texture. The word is centered on a dark background.

SONOS

QUICKSTART GUIDE

PLAY:1

SET IT UP

To add a SONOS PLAY:1™ to an existing Sonos system just plug it in and select Add a Sonos Component from the Settings menu on your handheld controller, or select Add a Sonos Component from the Manage menu when using the Sonos Controller for Mac or PC.


To set up a new SONOS system, turn to steps 1-4.

www.sonos.com/support/PLAY1

1


CONNECT...

- A** - THE SONOS PLAY:1 TO YOUR ROUTER WITH AN ETHERNET CABLE, OR
- B** - A SONOS BRIDGE TO YOUR ROUTER IF YOU PREFER TO USE THE SONOS PLAY:1 WIRELESSLY

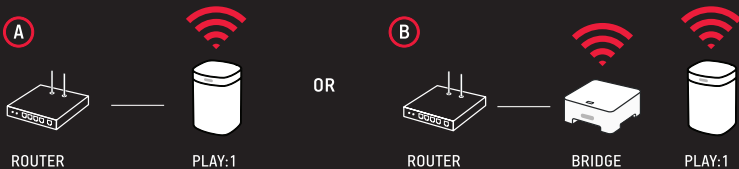**2**

PLACE ADDITIONAL SONOS COMPONENTS IN THE ROOMS OF YOUR CHOICE AND APPLY POWER (OPTIONAL)

YOU WILL BE PROMPTED TO ADD THEM TO YOUR SONOS SYSTEM IN STEP 3.

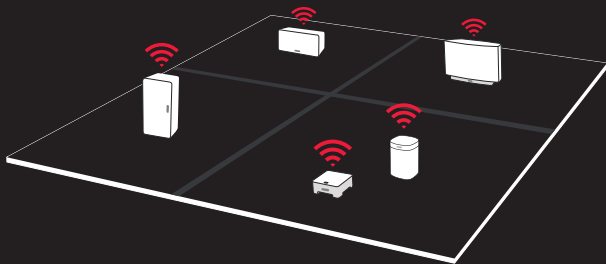

3

DOWNLOAD A SONOS CONTROLLER APP

FOLLOW THE PROMPTS TO SET UP YOUR SONOS SYSTEM. ADD THE BRIDGE OR PLAY:1 THAT'S CONNECTED TO YOUR ROUTER BEFORE ADDING OTHER COMPONENTS.



Mac/PC

Sonos Controller for Mac or PC
www.sonos.com/install



Mobile/Tablet

Download the Sonos Controller
 App to your device

BRIDGE



OR

PLAY:1



Register during
 installation to receive
 future software updates.

4

PLAY MUSIC

CHOOSE FROM THE MUSIC MENU ON YOUR SONOS CONTROLLER.



Radio. Select from more than 100,000 free Internet radio stations, podcasts and shows.



More Music. Add your music services.



Music Library. Play music from your computer or any Network-Attached Storage (NAS) device. If you have music stored on your computer, use the Sonos Controller for Mac or PC to add music by selecting Music Library Settings from the Manage menu.

For a full list of music choices, go to www.sonos.com/music



PLAY:1 Play/Pause button. Press once to start or stop the music, twice to skip to the next track.

ASK US

No question is too big or too small

Website
sonos.com/support

Email
support@sonos.com

Product User Guides
sonos.com/guides

Telephone

Australia
03 9874 0800

France
0800 910 769

Spain
0917 482942

Austria
0800 291 623

Germany
0800 000 5339

Sweden
0207 93593

Belgium
0800 38904

Italy
800 972444

Switzerland
0800 56 25 25

Brazil
0800 025 0827

Mexico
01 800 083 5513

UK
0808 2346596

Denmark
80251135

Netherlands
0800 0234361

Europe (toll call)
+49 (0) 1803 447000

US and Canada (English)
1 800 680 2345

SONOS™

www.sonos.com

640-00148

© 2004 -2013 Sonos Inc. All rights reserved. Sonos, PLAY:1 and all other Sonos product names and slogans are trademarks or registered trademarks of Sonos, Inc. Sonos Reg. U.S. Pat & TM Off.

